


80 Series V Multimeter Quick Reference Guide

⚠ See Users Manual for "Safety Information" and complete operating information.


Fuse Test

🎵 + LEAD = OK

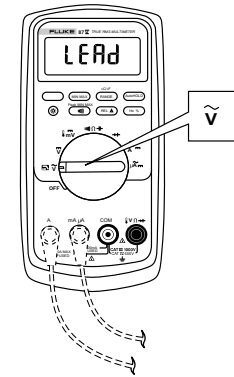


Test Lead Alert


🎵 + LEAD = OK

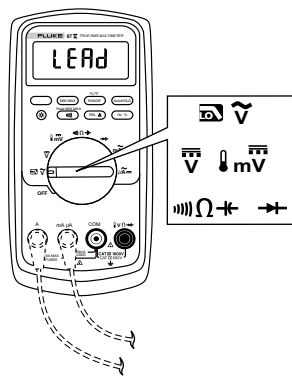


Voltage $\tilde{V}$ $\bar{V}$ mV

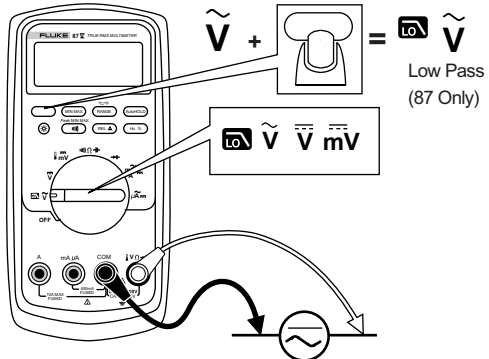


Temperature (87 Only)

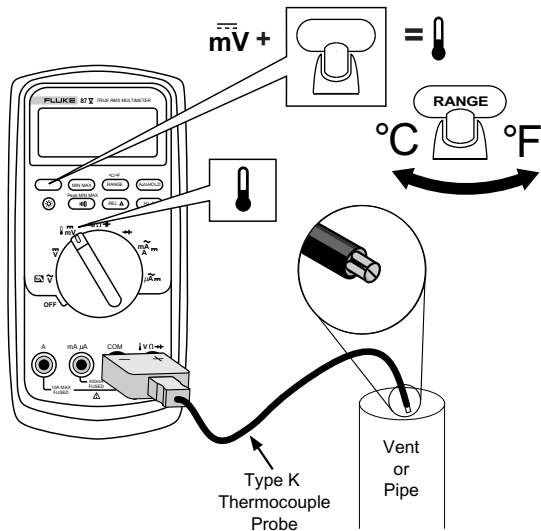


Resistance Ω

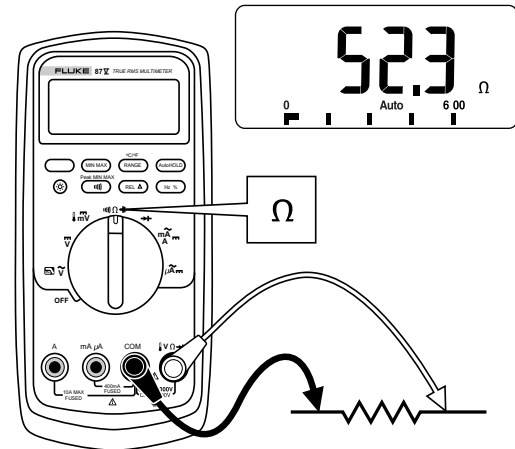


Conductance nS

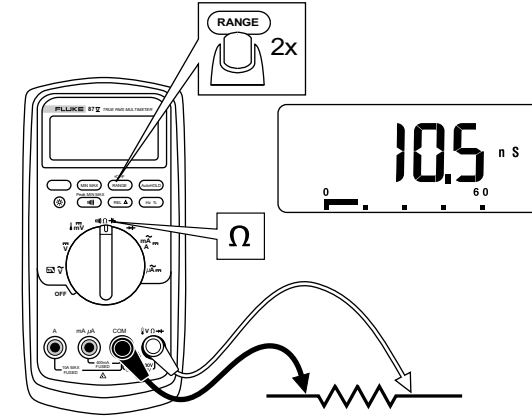


Continuity

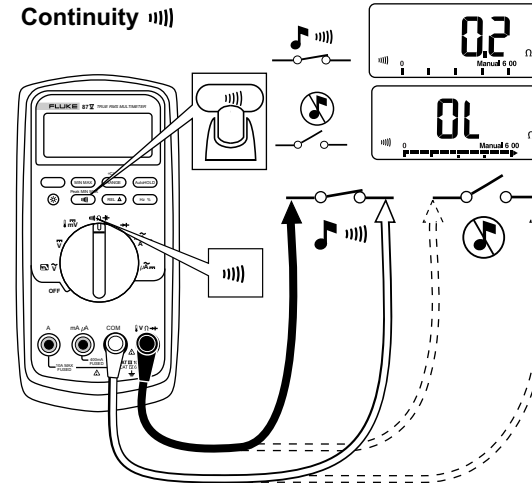





Capacitance

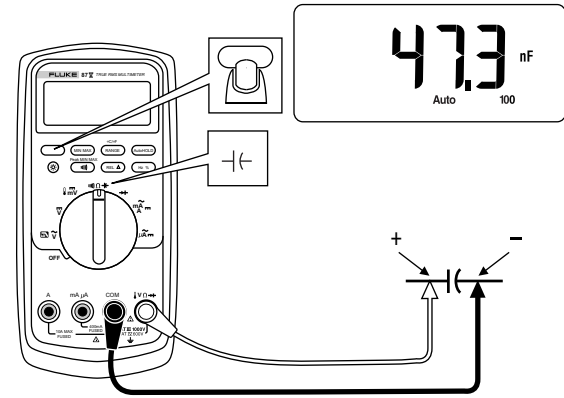


Current $\tilde{mA}$, $\tilde{A}$, $\mu\tilde{A}$, mA, A, μA

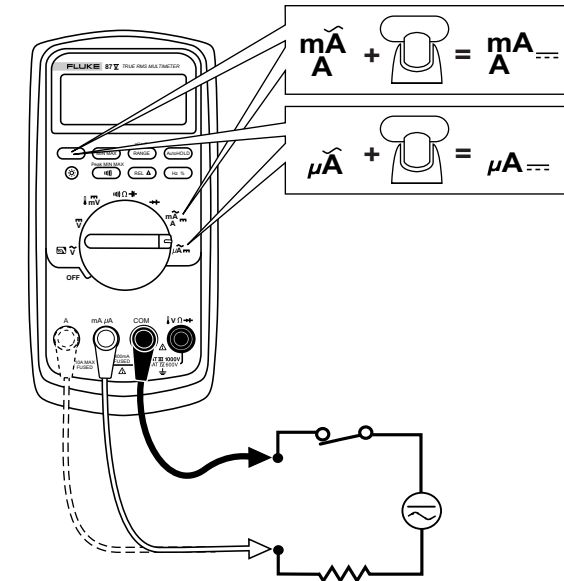


Diode Test →

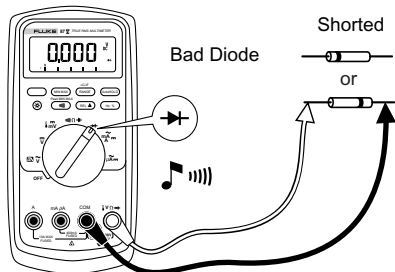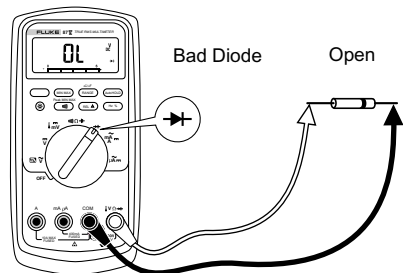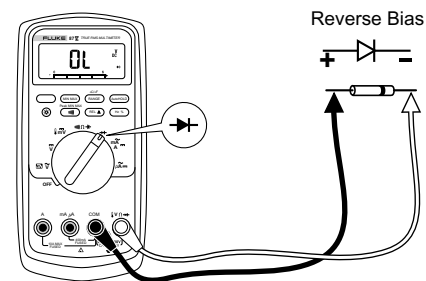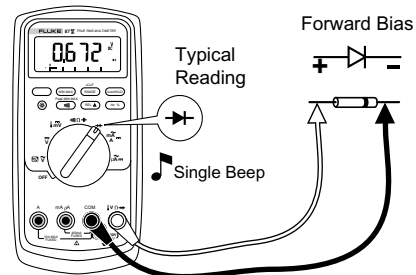


Frequency Hz

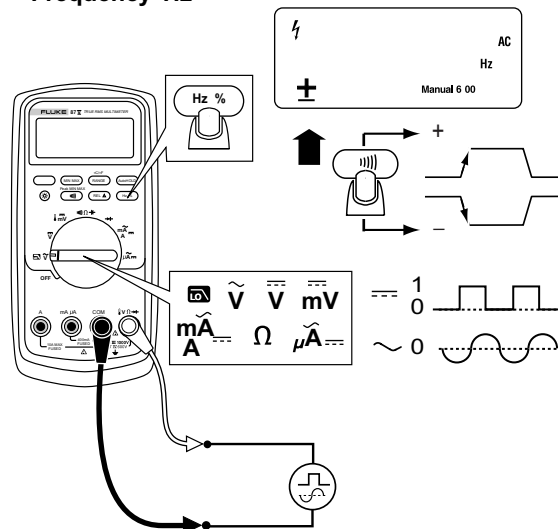


Duty Cycle %

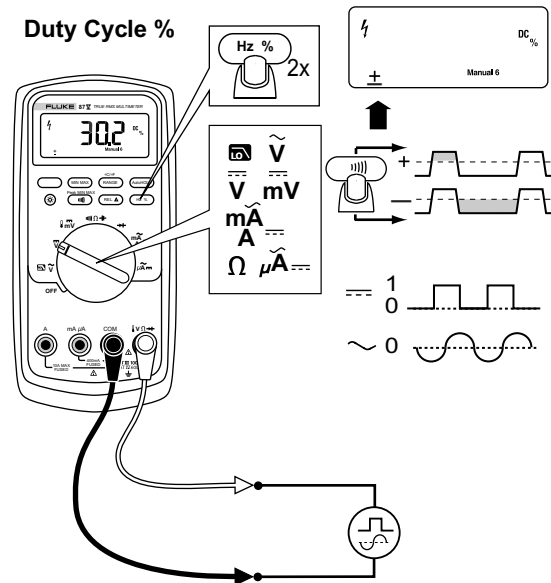


Min, Max, Average MIN MAX

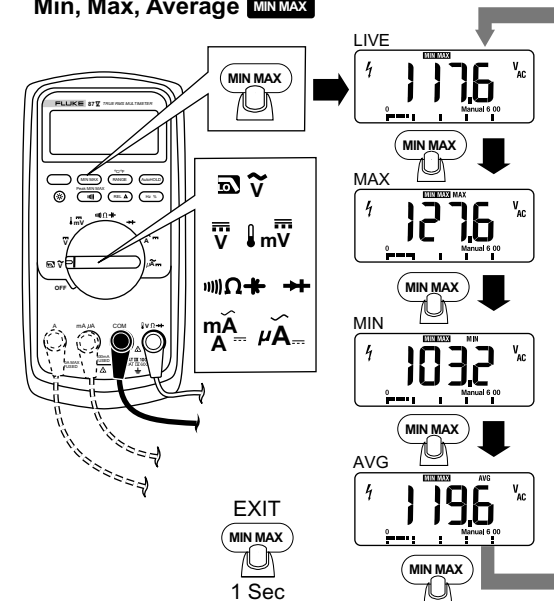


AutoHOLD → HOLD

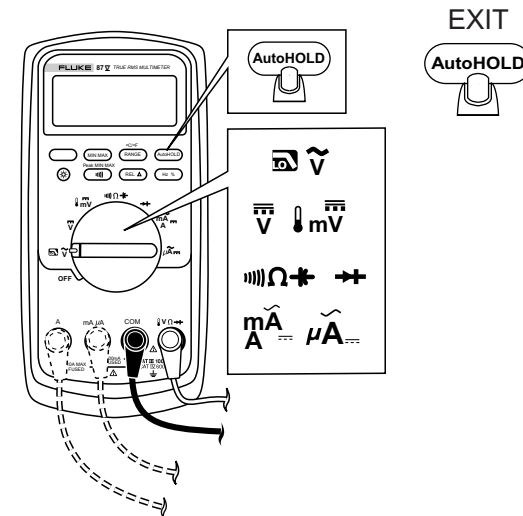

Relative Δ

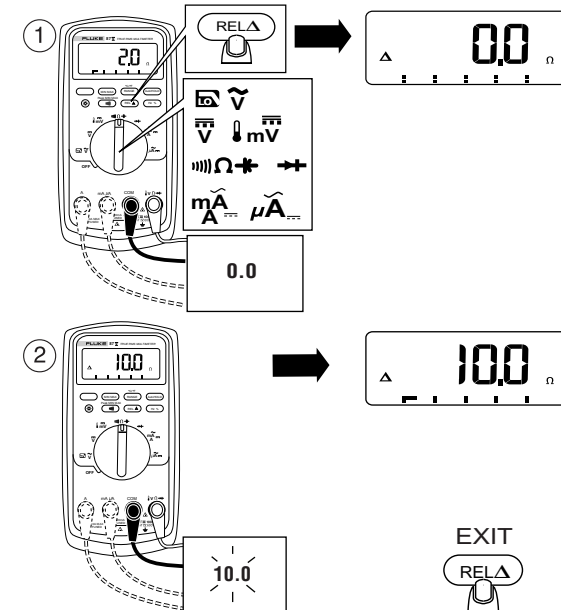

Hi Res Mode (87 Only)

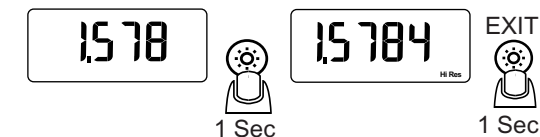

ToolPak

